 


Product Manual

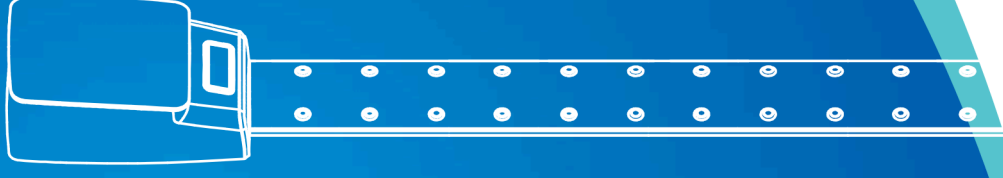

First of all, we would like to express our sincere thanks for choosing our company's products. Before installation and use, please read this manual carefully. Please strictly adhere to the warnings and precautions marked in this manual.

 
This product utilizes a blow drying system to quickly dry the body. Combined with negative ion functionality, it locks in skin moisture, maintains skin hydration, prevents skin dryness and cracking, and prevents the generation of dandruff and static electricity. It effectively prevents various cross infections caused by the repeated use of towels and bath towels in public places, while also avoiding the irritation to the skin caused by lint on towels and bath towels. It is widely used in households, hotels, apartments, bathrooms, and bathhouses. This new method of personal hygiene ensures a cleaner and more comfortable body.

1 Product Specifications

- 1.1 Product Name: Body Dryer
 - 1.2 Model Number: TY6001
 - 1.3 Rated Voltage/Frequency, Power: (220-240)V~/(50-60)Hz , 3300W
- ## 2 Main Performance
- 2.1 Air Outlet Temperature: 48° C-58° C (ambient temperature >18° C)
 - 2.2 Wind Speed Settings: 4 levels
 - 2.3 Heating Element: Spring wire heating
 - 2.4 Safety Protection: Overheat protection, leakage protection

3 Installation and Usage Instructions


3.1 Installation Method:

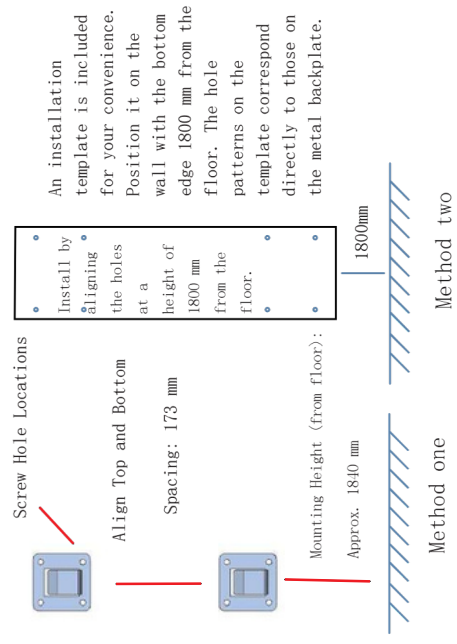

3.1.1 Secure the two metal mounting plates from the accessory kit to the wall as shown in the diagram below.

3.1.2 After installing the metal mounting brackets, attach the rear hook of the hand dryer's main unit to the metal backplate as illustrated below.

 
3.1.3 Remove the tail section module of the hand dryer and insert it upward into the main unit. Once assembled, note the plastic locking clip located at the bottom of the tail section. Mark its position on the wall using a marker. Then, remove all components, detach the plastic clip, and securely fix it to the marked spot using screws. Finally, reinstall the tail section and other parts from the bottom upward.

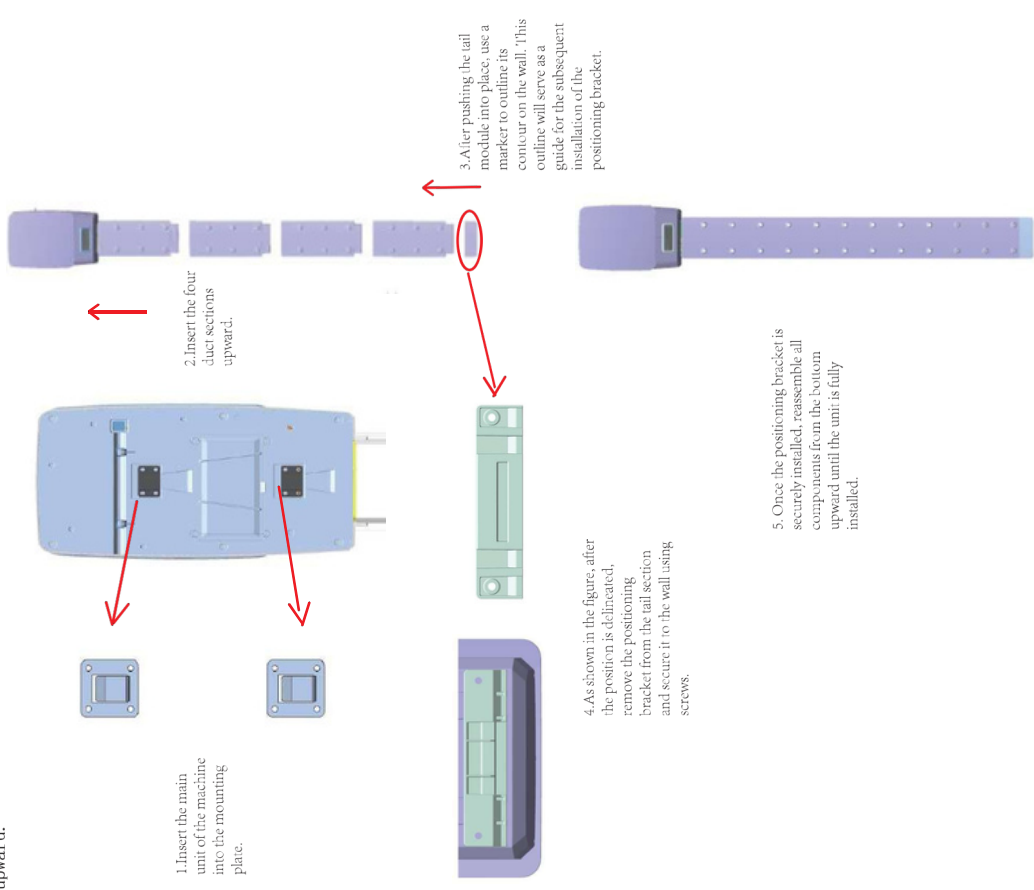

illuminate automatically.

3.3 Usage Instructions

 3.3.1 The touchscreen interface is shown in the diagram below.

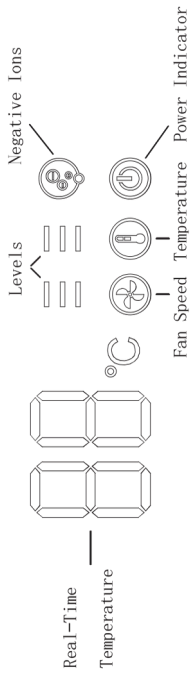

3.3.2 Power Indicator: After powering on, the power indicator light illuminates. Clicking the power indicator light will start the machine. After starting, clicking the power indicator light again will turn off the machine. When the machine is turned off, the negative ion indicator light stops flashing, and the fan stops after a few seconds (Note: After clicking to stop, the machine will shut down after a delay, and the fan will continue to operate for a few seconds to reduce the temperature of the heating wire).

3.3.3 Negative Ion Indicator Light: When the machine is operating, the negative ions work automatically, flashing during operation and not flashing when stopped.

3.3.4 Real-time Temperature: The area on the right side of the display screen shows the real-time temperature, displaying the air outlet temperature.

3.3.5 Fan Speed Adjustment: Tap to cycle through four speed levels (1-4). Level 1 corresponds to the minimum airflow. Note: Speed levels are not displayed numerically on the screen.

3.3.6 Temperature Control: Tap to cycle through four temperature settings (1-4). Level 1 maintains ambient temperature (no heating). Note: Temperature levels are not displayed numerically on the screen.

3.3.7 Special Function Description: After pressing the start button, the body dryer will automatically operate at the highest temperature and lowest wind speed for 50 seconds. After 50 seconds, the wind speed increases to level 2 and continues to operate for 40 seconds, then increases to level 3 and continues to operate for 40 seconds. Finally, it stabilizes at the highest wind speed and temperature for the maximum operating time, which is 10 minutes. During this period, if the user actively adjusts the temperature or wind speed level, the special function mode will be exited, and the user's actual settings will take effect.

4 Precautions

4.1 The body dryer is a high-power household appliance. Before use, check if the voltage matches the rating on the nameplate, and inspect the power cord and plug for any damage. The body dryer uses a power supply of 220V~, 50Hz and should be connected to a three-core socket with a rating of 16A or higher. The body dryer should not share a power socket with other appliances.

4.2 Do not bend, pull, or knot the power cord to prevent overheating.

4.3 When in use, the body dryer must be placed vertically and securely fixed to prevent tipping over and causing damage or danger.

4.4 It is strictly prohibited to dry clothes on the body dryer or cover the machine with any objects.

4.5 During use, do not insert fingers or conductive objects into the machine to prevent electric shock. Pay special attention to children, the elderly, and disabled individuals.

4.6 Incorrect startup of the body dryer may cause a fire, so do not use timers, automatic power-on devices, or any other devices to operate the body dryer.

4.7 Do not connect the power supply before the body dryer is assembled to avoid accidents.

4.8 Before unplugging the plug, turn off the power, and do not unplug the power plug with wet hands to avoid the risk of electric shock.

4.9 If the power cord is damaged, it must be replaced by the manufacturer, its repair department, or similar specialized personnel to avoid danger.

4.10 The body dryer is not suitable for individuals with physical, sensory, or mental disabilities, or those lacking experience and common sense, unless supervised by others who can ensure their safety and have read the instructions in advance.

4.11 Do not touch the surface of the machine for a long time after power on to avoid burns, especially pay attention to children.

4.12 It is prohibited to directly cover combustible materials on the surface of the machine, and the inlet and outlet air ducts must not be covered.

4.13 It is forbidden to use the method of plugging and unplugging the power cord plug to turn the machine on and off.

- 4.14 Before moving, unplug the power plug, and be careful when moving. Do not directly pull the power cord to move the machine.
- 4.15 During use, do not let the power cord hang on the surface of the machine to prevent scalding.
- 4.16 When installing, place the machine in a spacious area to facilitate air circulation.
- 4.17 It is strictly prohibited to spray water on the body of the machine, and do not let water drip into the control parts.
- 4.18 The machine must not be disassembled arbitrarily, and no modifications should be made to the body dryer in any form to avoid danger.
- 4.19 When going out or not using it for a long time, please unplug the power plug from the socket.
- 4.20 When wiping and maintaining, first cut off the power supply, and then clean with a damp soft cloth or soft brush.
- 4.21 If a malfunction occurs, please contact the local after-sales service center. Do not disassemble the machine for repair without authorization to avoid danger.
- 4.22 If any abnormal odors or smoke are detected during use, immediately turn off the power and contact after-sales personnel.
- 4.23 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 4.24 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ## 5 Cleaning and Maintenance
- 5.1 Before performing maintenance, unplug the power cord plug.
- 5.2 For cleaning and maintenance, use a soft cloth or soft brush to wipe the body of the machine. If there are stains, use a damp cloth with a small amount of detergent to wipe them off. Do not use alcohol, acetone, gasoline, or other chemical solvents to scrub, to prevent damage to the surface coating of the machine.

6 Troubleshooting Guide

- Issue 1: Motor does not rotate, no heating** Possible Cause 1: Power is not connected
Solution: Connect the power
- Possible Cause 2: Touch switch is damaged**
Solution: Contact after-sales service for replacement of the touch switch
- Issue 2: Motor rotates, but no heating**
Possible Cause 1: Temperature setting is set to room temperature
Solution: Set the temperature setting to the heating mode
- Possible Cause 2: Heating wire is damaged**
Solution: Contact after-sales service for replacement of the heating wire

Warranty Card

This product comes with a one-year free warranty from the date of sale. Damage caused by self-disassembly and repair is not covered by the warranty, but the company still provides repair services. The cost of parts and repairs is borne by the user.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.